

<b>Title:</b>	How to configure Alarm Notifications to Mobile Phone (SMS or Phone call)	<b>Version:</b>	v1.0	<b>Date:</b>	10/10/2018
<b>Product:</b>	AX Series Wireless Security Control Panel			<b>Page:</b>	1 of 3

## Preparation

---

1. AX Series Wireless Security Control Panel, V1.0.0 or above
2. Internet Explorer or 4200 (2.7.3.8)
3. One SIM card and one Mobile Phone

## How to configure Alarm Notifications to Mobile Phone (SMS or Phone call)

---

When an alarm is triggered, if you want to send the alarm notification to mobile phone (SMS or Phone call), you can set the notification push parameters.

### 1. Put sim card into the card slot

- 1) Please turn off power of Wireless Security Control Panel.
- 2) Put sim card into the card slot.
- 3) Turn on Power of the Wireless Security Control Panel.



#### Note

If you insert the SIM card when the power is on, you need to restart the wireless control panel.

### 2. Configure Message Notifications

- 1) Click **Communication Parameters** → **Message Notification**.
- 2) Enable the target notification.

#### Alarm and Tampering Event Notification

The device will push notifications when the zone alarm is triggered or the device tamper alarm is triggered or restored.

#### Safety Event Notification

The device will push notifications when fire alarm, gas alarm, or medical alarm is triggered.

#### System Status Notification

The device will push notifications when any status in the system is changed.

#### Operation Event Notification

The device will push notifications when the user operates the device.

<b>Title:</b>	How to configure Alarm Notifications to Mobile Phone (SMS or Phone call)	<b>Version:</b>	v1.0	<b>Date:</b>	10/10/2018
<b>Product:</b>	AX Series Wireless Security Control Panel			<b>Page:</b>	2 of 3

3) Set Mobile Phone Index, SIM Card No. And enable **Notification Type** (SMS or Phone call).


The screenshot shows the Hikvision web interface for configuring mobile phone notifications. The left sidebar contains a menu with 'Message Notification' highlighted. The main content area is titled 'Mobile Phone' and contains the following settings:

- Mobile Phone Index: 1
- SIM Card No.: 15757165645 (with a green checkmark)
- Notification Type:  SMS,  Phone Call
- Alarm and Tampering Event Notification:
- Safety Event Notification:
- System Status Notification:
- Operation Event Notification:

A red 'Save' button is located at the bottom of the configuration area. Red arrows point to the 'Mobile Phone' tab, the SIM Card No. field, the Notification Type checkboxes, and the 'Message Notification' menu item.

©2018 Hikvision Digital Technology Co., Ltd. All Rights Reserved.

### 3. Result Show SMS:

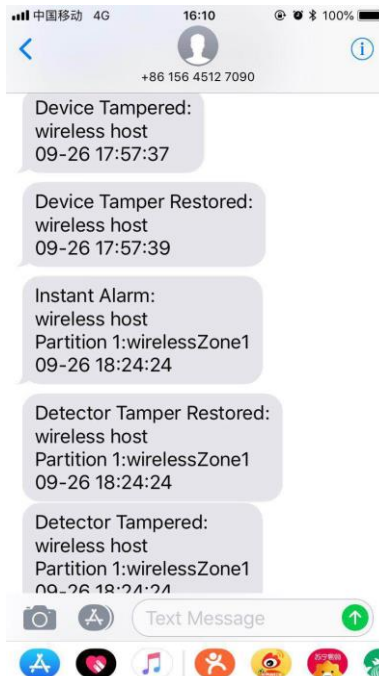



<b>Title:</b>	How to configure Alarm Notifications to Mobile Phone (SMS or Phone call)	<b>Version:</b>	v1.0	<b>Date:</b>	10/10/2018
<b>Product:</b>	AX Series Wireless Security Control Panel			<b>Page:</b>	3 of 3

**First Choice for Security Professionals**  
**HIKVISION Technical Support**